



MODEL OPTIONS

- 900 X 900 SCREEN
- 1000 X 1000 SCREEN
- 1220 X 900 SCREEN

INCLUDES FRONT DOOR ONLY INSTRUCTIONS



IMPORTANT INFORMATION

FLINDERS

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing faults. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of glass.

Damaged glass or missing parts will not be replaced under warranty if the installation process has begun.

NOTES: SAFETY GLASS CANNOT BE REWORKED

Please read these instructions carefully before you start installation. Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Securing into a stud or timber brace is highly recommended, if unable to do so, other secure means of fixing must then be considered.

AFTER CARE INSTRUCTIONS

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers. Glass cleaners can be used but with caution. If in doubt please contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.


12 MONTH WARRANTY

The warranty covers faults in the product construction, material and assembly. Faulty products will be repaired or exchanged free of charge. Faulty items become our property. In the event of a warranty claim, we will repair or replace defective products or pay for the cost of having defective products repaired or replaced, but will not be liable for any injury to any person, damage to any property, and indirect or inconsequential loss, or in any other respect.


This warranty does not include faults caused by:

Unsuitable or improper use. Incorrect installation. Normal wear and tear. Inadequate or complete lack of maintenance. Chemical, electrochemical or electrical influences.

TOOLS REQUIRED

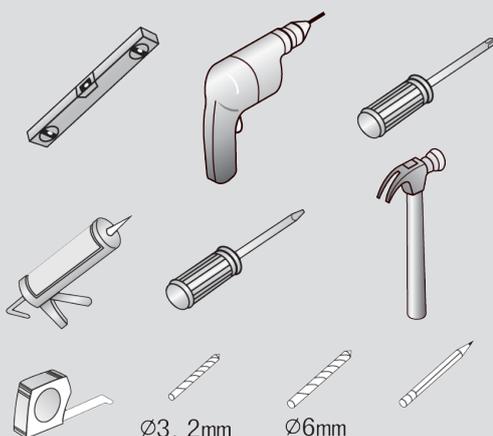


This product is heavy and may require 2 people to install.

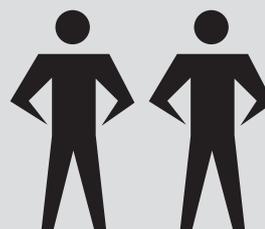



ASSEMBLY DRAWING

FLINDERS

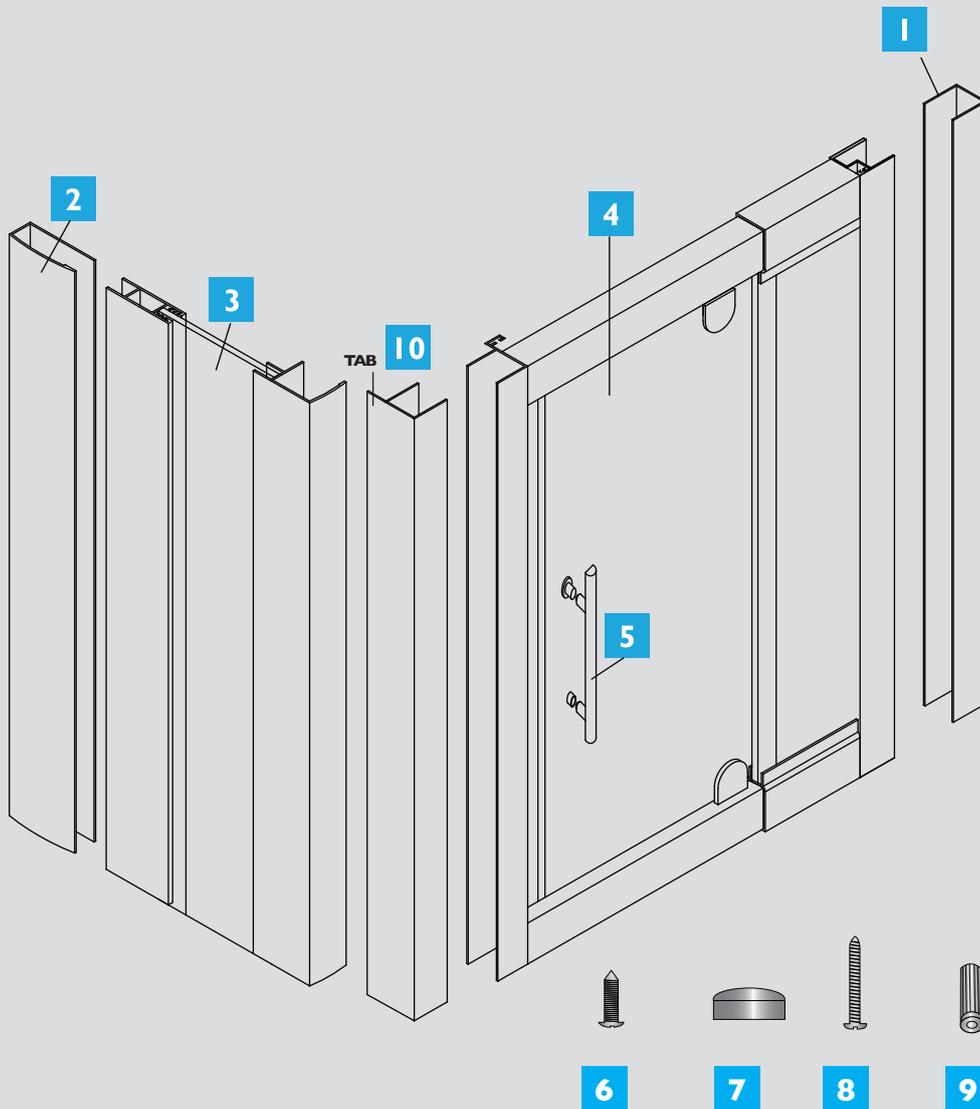

REQUIRED PARTS


- | | | | |
|----------|------------------------------|-----------|---|
| 1 | 1 x Door front assembly jamb | 2 | 1 x Fixed panel wall jamb |
| 3 | 1 x Fixed side panel | 4 | 1 x Door front assembly |
| 5 | 1 x Handle set | 6 | 15 x Fixed panel screws - 8mm |
| 7 | 8 x Fixed panel screw caps | 8 | 8 x Wall jamb fixing screws - 35mm |
| 9 | 8 x 6mm wall plugs | 10 | Wall jamb is for front door only installation |



FRONT DOOR ONLY

FLINDERS


STEPS A - D

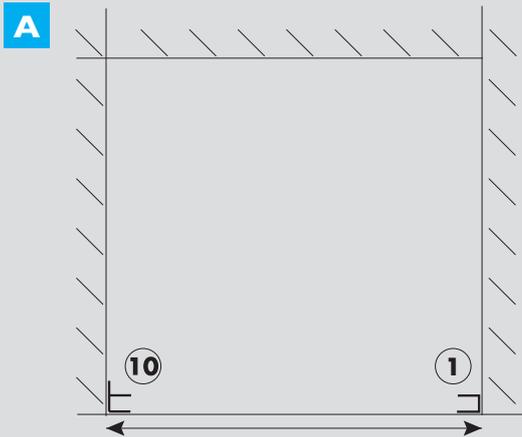

A Measure your shower base / shower area. The measurement to the outside edge of the wall jamps (1 & 10) should be somewhere within the minimum and maximum of the screen size. See chart to the left.

Note: If using the maximum size make sure that you allow for walls that may out of plumb. If your walls are 10mm out of plumb reduce your screen size area by this amount.

Min	Max	Model
750mm	810mm	820 x 820mm Front set
830mm	890mm	900 x 900mm Front set
930mm	990mm	1000 x 1000mm Front set
1140mm	1200mm	1200 Front Set

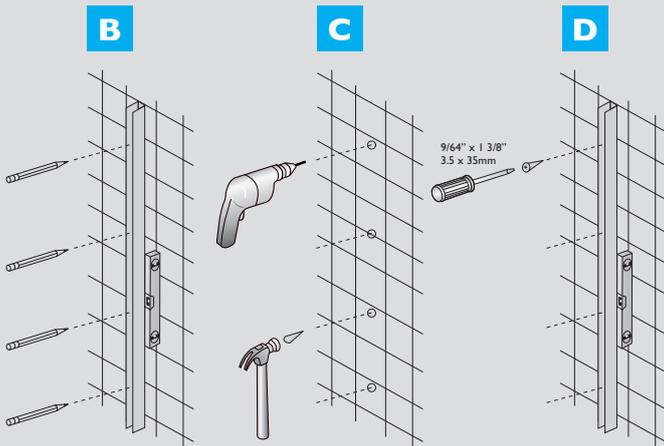

B Using a level ensure jamb (1 & 10) are plumb then mark the outside edge with a pencil. Then mark your pre-drilled screw holes that are on the inside of the jamb (1) and on the tab of jamb (10). Tab to be on the inside of shower. See diagram A above.

C Remove jamps and drill 6mm holes into walls with drill bit. Insert plastic wall plugs (9) that are provided.

Note: Please use the correct or most suitable fixing for the surface you are screwing into, to ensure the jamb is securely fixed to the wall eg. toggle wall plug.


D Using a level, ensure jamb (1) is plumb and the holes in the jamb line up with the holes in the wall. Fix jamb to wall using the screws provided (8).



FRONT DOOR ONLY

FLINDERS


STEPS E & F

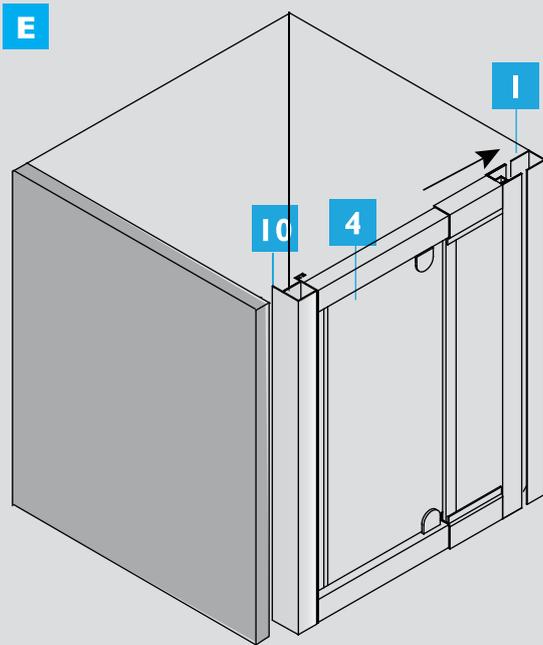

E Slide front assembly (4) into jamb (1)

Hint: Insert top or bottom corner first then you will find that the rest of the panel will slide in easily.

Slide jamb (10) onto the other end of the front assembly and make sure the tab is to the inside of the shower area. See picture.

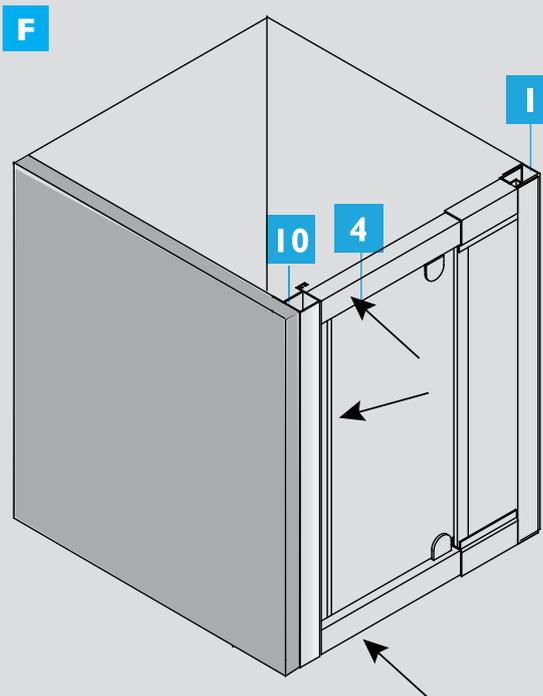

F Pivot the front assembly (4) into position and line up wall jamb (10) with the holes in the wall and the pencil line. Fix jamb (10) to the wall using the screws provided (8).


Continue to step G on page 8 for further installation instructions.



2 SIDED INSTALLATION

FLINDERS

STEPS A - D

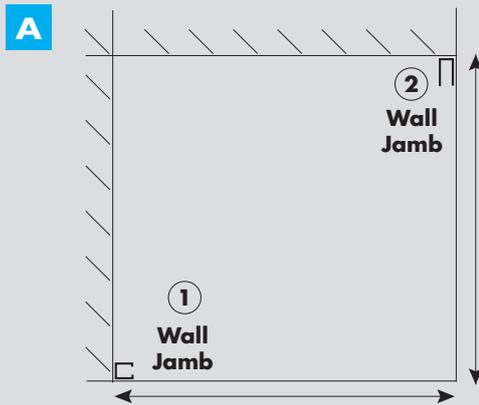


SIDE PANEL ASSEMBLY.		Model
Min	Max	
770mm	800mm	820 x 820mm Side Panel
835mm	870mm	900 x 900mm Side Panel
935mm	970mm	1000 x 1000mm Side Panel

A Measure your shower base / shower area. The measurement to the outside edge of the wall jamba (1 & 2) should be somewhere within the minimum and maximum of the screen size. See chart to the left.

Note: If using the maximum size make sure that you allow for walls that may be out of plumb. If your walls are 10mm out of plumb reduce your screen size area by this amount.

FRONT PANEL ASSEMBLY.

Min	Max	Model
750mm	810mm	820 x 820mm Front Set
830mm	890mm	900 x 900mm Front Set
930mm	990mm	1000 x 1000mm Front Set
1140mm	1200mm	1200 Front Set

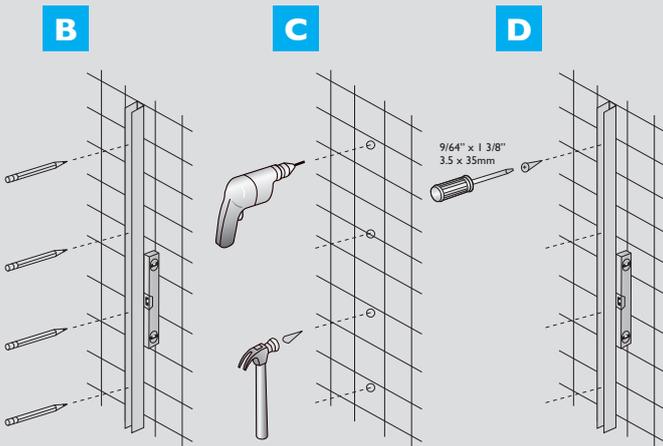

B Using a level ensure jamba (1&2) are plumb then mark the outside edge with a pencil. Then mark your pre-drilled screw holes that are on the inside of the jamb.

C Remove jamba and drill 6mm holes with drill bit. Insert plastic wall plugs (9) that are provided.

Note: Please use the correct or most suitable fixing for the surface you are screwing into, to ensure the jamb is securely fixed to the wall eg. toggle wall plug.


D Using a level, ensure jamba (1 & 2) are plumb and the holes in the jamb line up with the holes in the wall. Fix jamb to wall using the screws provided (8).



2 SIDED INSTALLATION


FLINDERS

STEPS E & F

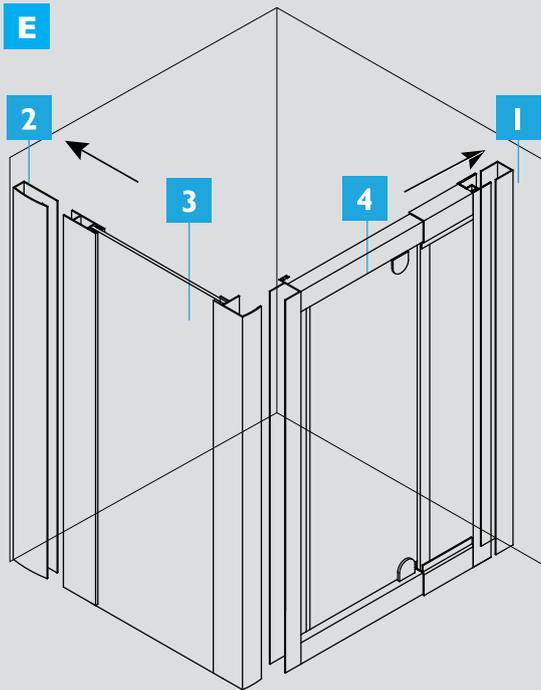


E Slide fixed panel (3) and door front assembly (4) into jambs (1 & 2)

Hint: Insert top or bottom corner first then you will find that the rest of the panel will slide in easily.

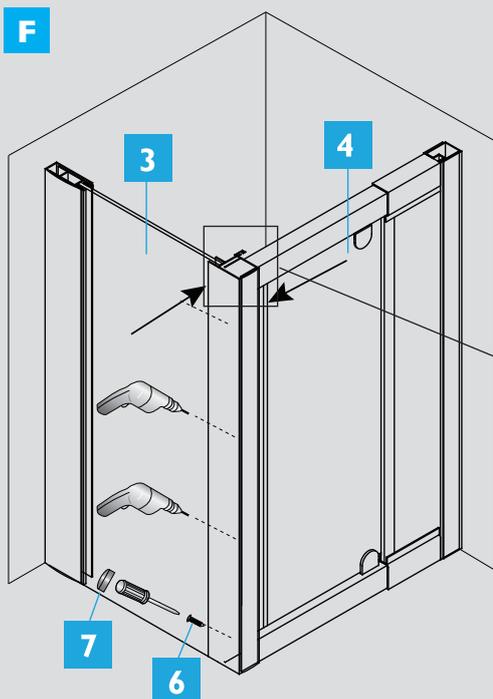

F Slide front of fixed panel (3) over extrusion on front door assembly (4). Now drill 4 equally spaced 3.2mm holes on the **INSIDE** of the screen (See aerial view). Fix side panel (3) to front assembly (4) using fixed panel screws 8mm (6). Cap all screws using fixed panel screw caps (7).

AerialView

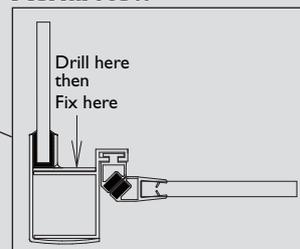




MARBLETREND INSTALLATION GUIDE


FLINDERS

STEPS G & H

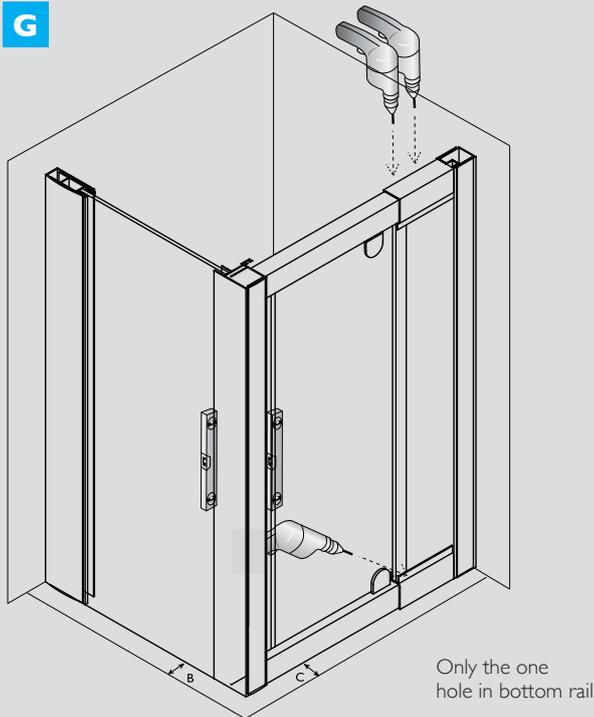


G Adjust front assembly and fixed side panel so $B=C$. This is done by sliding the fixed panel in or out of the wall extrusion for the fixed side. For the front, the top and bottom rails of the front assembly slide apart for adjustment.


Now fix off the bottom rail at the location pictured on the inside of the screen. Using a level ensure front assembly and side panel are vertical. Now drill 3.2mm holes then fix with screws (6) as shown to top rail of front assembly.

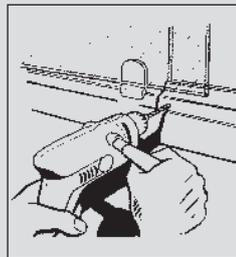

INSIDESHOWERVIEW

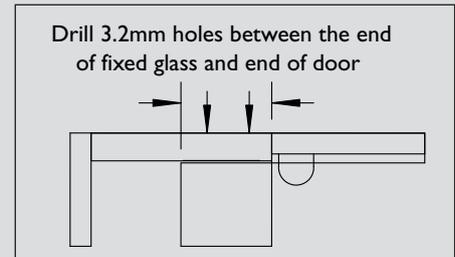


FRONT SHOWER VIEW

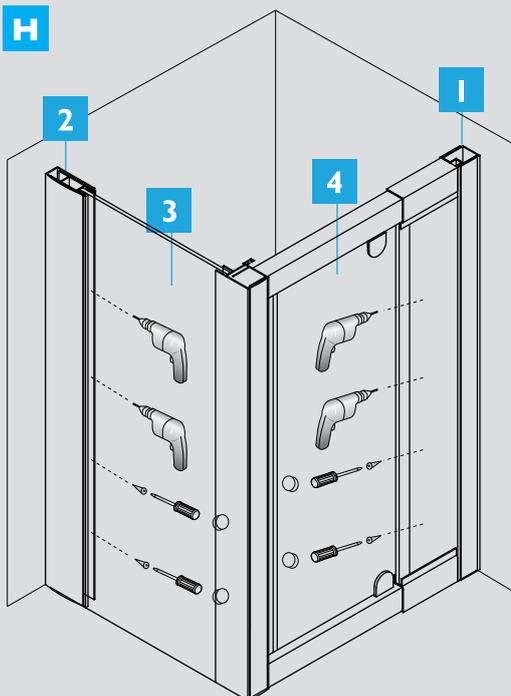

H Now drill 4 equally spaced 3.2mm holes into the wall jamba (1 & 2) on the **INSIDE** of the screen. Make sure that your drill holes are more than 20mm back from the glass edge, when using smallest screen size, otherwise you may break the glass.


Make sure that the holes also go through the aluminium of the fixed side panel and the door front assembly.

Fix off wall jamba (1 & 2) to fixed side panels (3 & 4) using fixed panels screws (6) and covering them with caps (7) provided

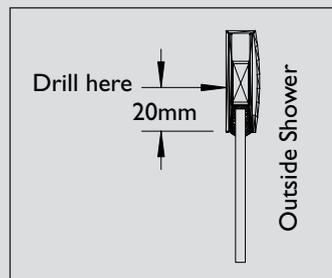



STEPS I & J

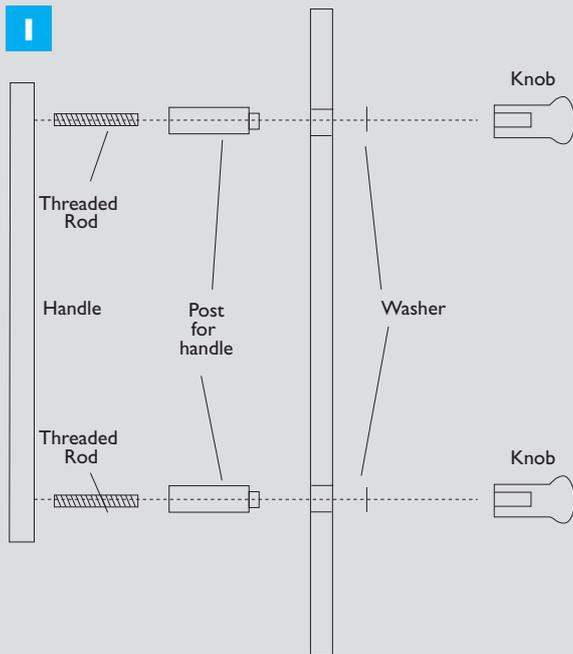


I Attached handle to the door as shown.

Step 1 Screw the threaded rod into the handle.

Step 2 Slide top and bottom post onto the threaded rod, making sure the post is facing the right way

Step 3 Bring the handle up to the glass, allowing the top and bottom post to locate into the hole in the glass. Fix the knob onto the threaded rod, making sure the washer is between the glass and the knob.

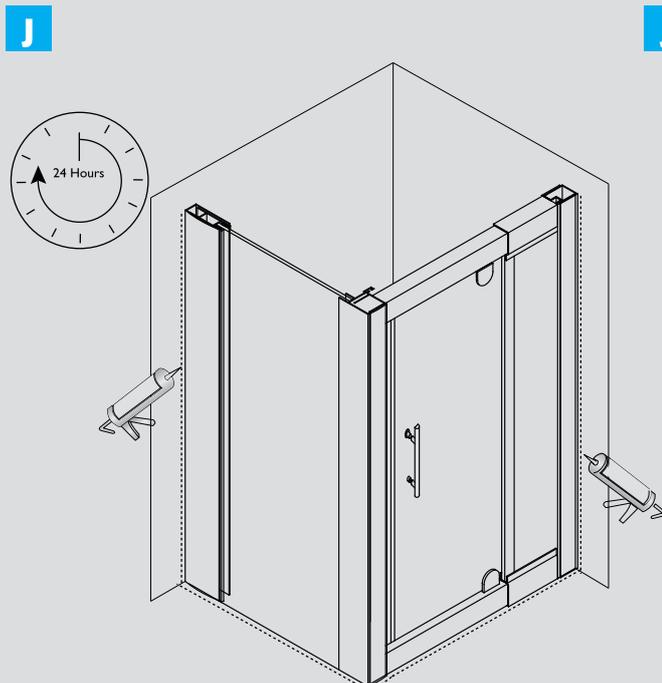

J Apply silicone sealer around all external joints of shower screen and allow 24 hours for silicone to set.

Silicone is not used on the inside of the shower screen because in time water can build up within the wall jamb and make the screen leak out of the shower area. The screens are designed to allow the water to return into the shower area if any is present.

Screens that are sealed on the inside, will void warranty.



FOR ANY FURTHER INFORMATION PLEASE CONTACT US:

K>8I DG>6

31 Koornang Road, Scoresby, VIC 3179

T 1300 717 717 F 1300 746 480

NEW SOUTH WALES

2/97 Banksia Street, Botany, NSW 2019

T 1300 717 717 F 1300 746 480

QUEENSLAND

Unit 1/477 Newman Road, Geebung, QLD 4034

T 1300 717 717 F 1300 746 480

FOR ALL OTHER STATES AND TERRITORIES

T 1300 717 717 F 1300 746 480

www.marbletrend.com.au